



Suggested Schematic for Unwind Control with E/P converters - Splice Configuration

TTS Limited
14 Highpoint Business Village
Henwood, Ashford, Kent
TN24 8DH

Telephone +44 (0) 1233 624422
Fax +44 (0) 870 705 9678

E-Mail Support@tts-systems.com

HPTC Tension Control
Splice Configuration

Issue 1	22/06/2015	Initial Layout and Release
Issue 2	xx/xx/xxxx	
Issue 3	xx/xx/xxxx	
Issue 4	xx/xx/xxxx	
Issue 5	xx/xx/xxxx	

Tolerance	± 0.1 UNLESS OTHERWISE STATED			
Unit Scale	ALL DIMENSIONS SHOWN ARE IN MM			
REFER TO ADDITIONAL NOTES - IF IN DOUBT ASK				
Itemref /	Quantity	Title/Name, designation, material, dimension etc	Article No./Reference	
Designed by	Checked by	Approved by - date	Filename	Date
TTS	AWA	AWA - 23/06/15	XXX	23/06/15
TTS			XXX	
			Edition	Sheet
			0	1/1