



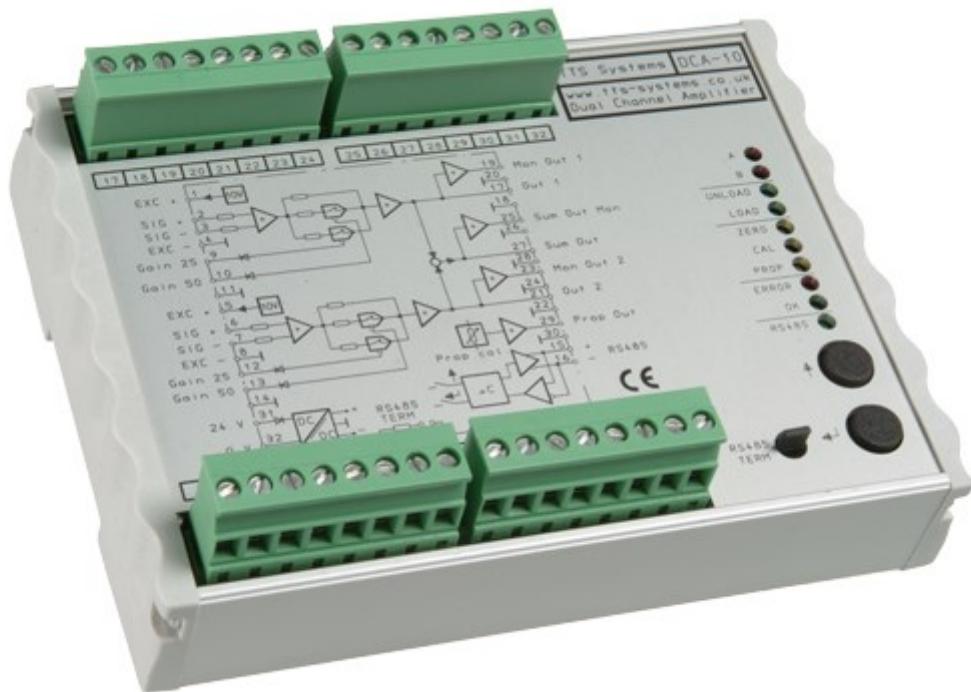


DCA-10 Graphical Calibration Procedure

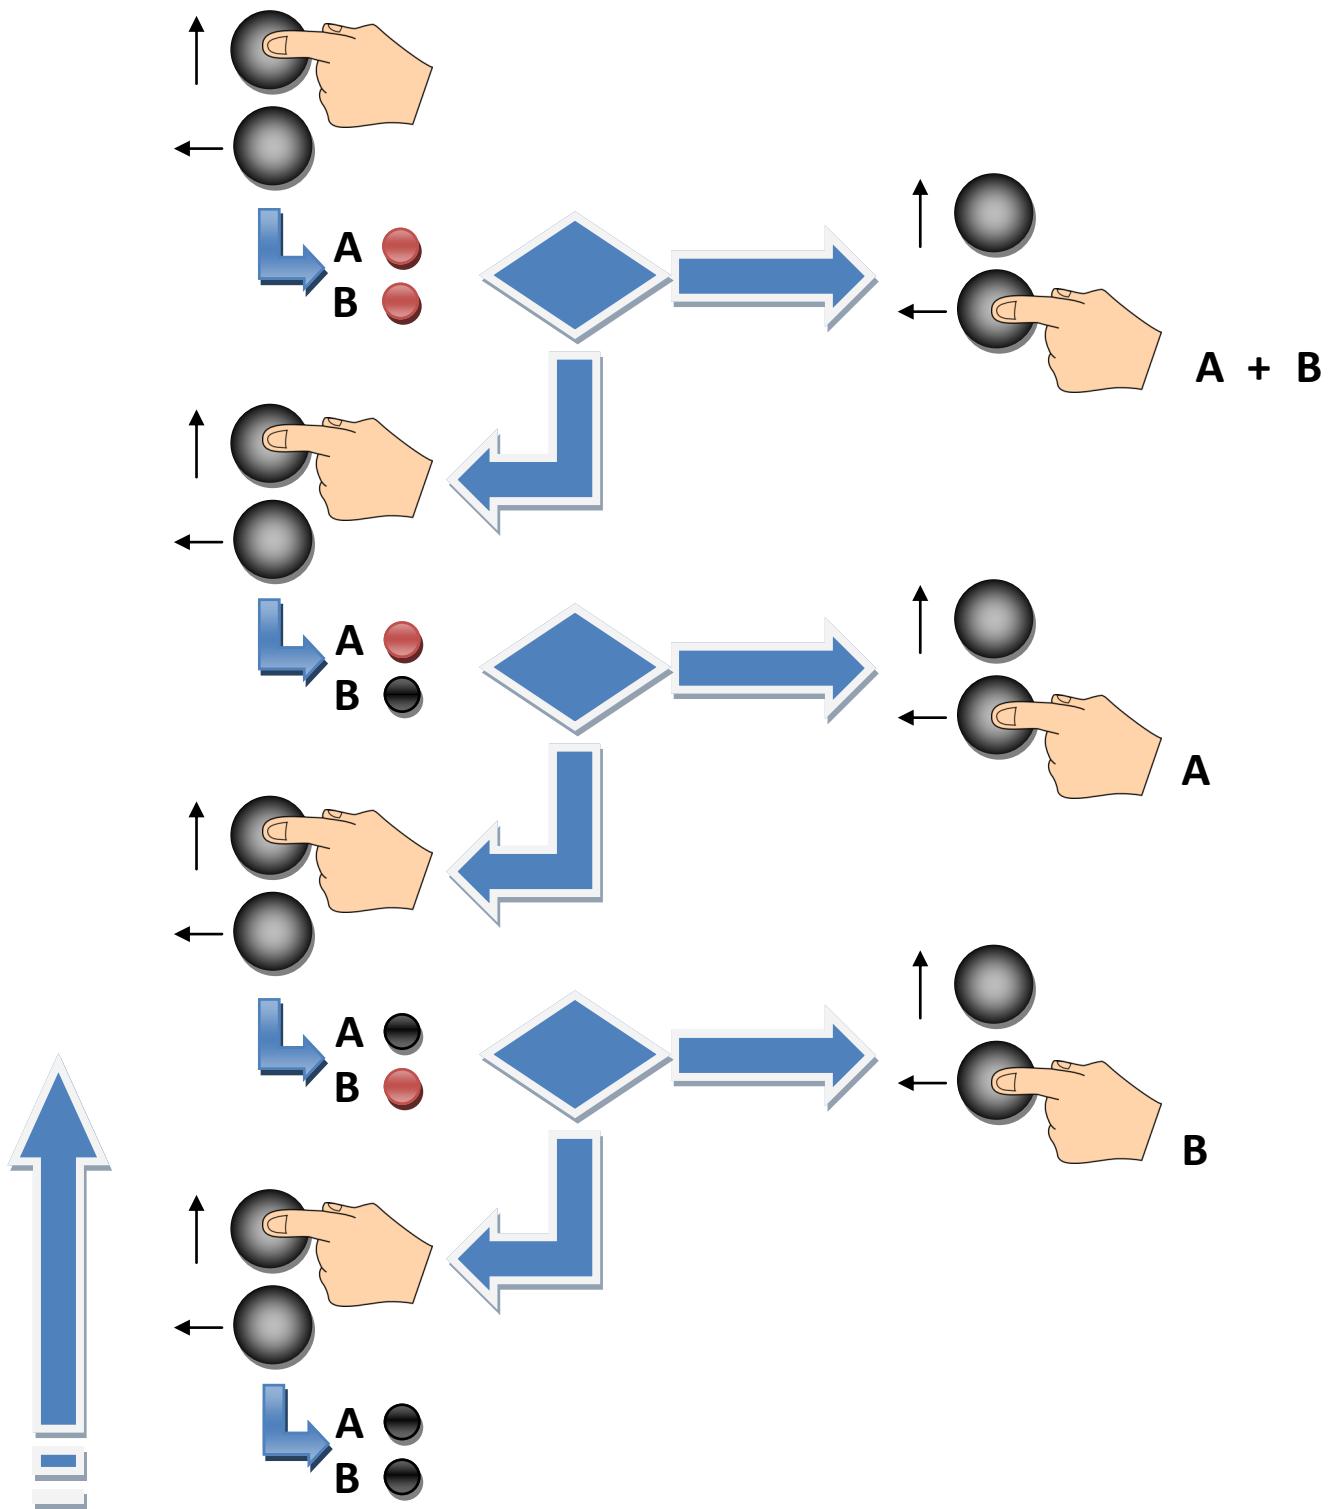



1—Select Channel






2—Select Function

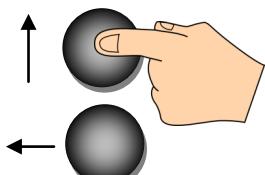



ZERO
CAL
PROP

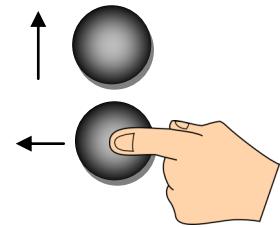 




**Zero
Function**

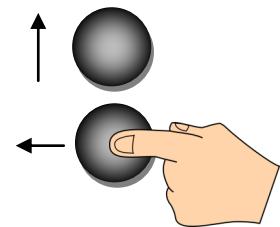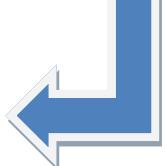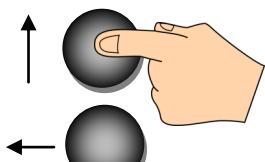


**Calibration
Function**

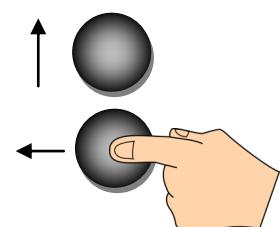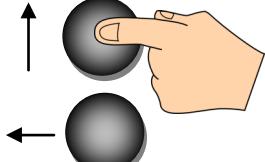



**Proportional
Calibration
Function**

 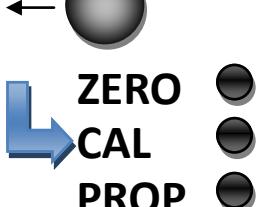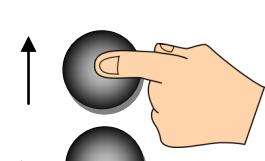



 
1—Select Channel → **2—Select Function** → **3—ZERO**



Zero Function

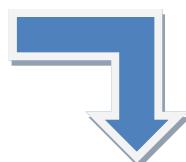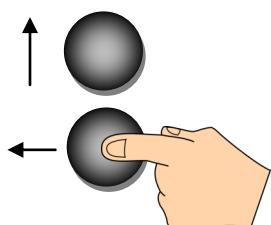

Unload
Load

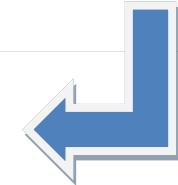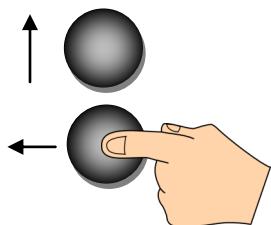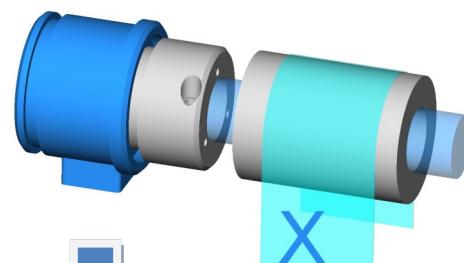

Unload
Load

 


ERROR
OK



OR

ERROR
OK




1—Select Channel → 2—Select Function → 3—CAL



Calibration Function

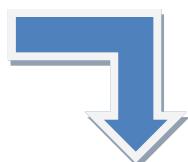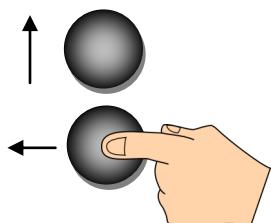

Unload ●
Load ●

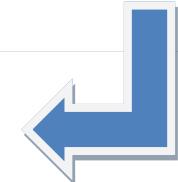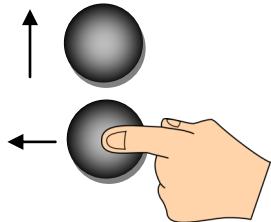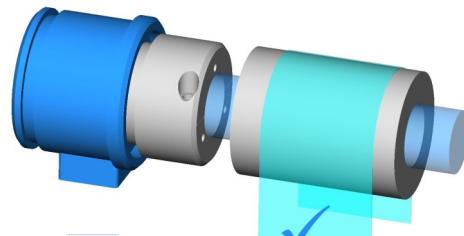

Unload ●
Load ●

 


ERROR ●
OK ●





OR

ERROR ●
OK ●

1—Select Channel → **2—Select Function** → **3—PROP**





Proportional Calibration Function

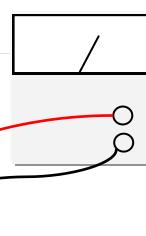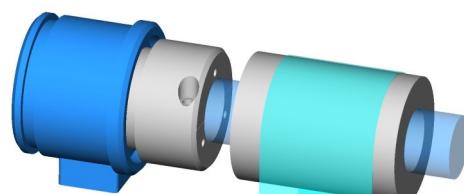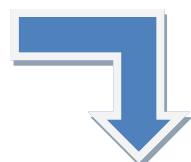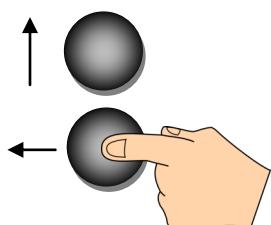

+ Volts

 - Volts

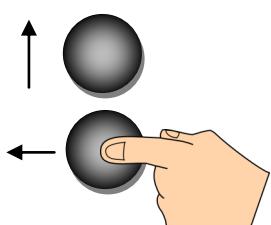

OR

